

CrystalView Pro *fiber* Rack



Digital fiber KVM extender rack

Rack containing 10 CrystalView Pro fiber transmitters or receivers

Extends keyboard, video, and mouse signals up to 33,000 feet away

Supports DVI and VGA video at resolutions up to 1600 x 1200

Single, Dual, Serial and Audio models

Easily adapted to your system

Features and Benefits

- Extend 10 KVM stations from 10 CPUs via fiber cable:
 - (MultiMode) 62.5-micron cable up to 650 feet
 - (MultiMode) 50-micron cable up to 1,300 feet
 - (SingleMode) 9-micron cable up to 33,000 feet
- Supports:
 - DVI and VGA video modes
 - PS/2, SUN, USB keyboards and mice
 - Full stereo audio (optional)
 - Serial (optional)
- Video resolutions up to 1600 x 1200 @ 60Hz
- Flexible modular architecture
- Compatible with Rose Electronics KVM switches such as ServeView Pro, UltraView Pro, and UltraMatrix
- Compatible with Windows, Windows NT, OS/2, Unix, Linux, and other operating systems
- Uses a microprocessor to emulate the keyboard and mouse. The keyboard and mouse on the receiver unit do not have to be connected for the PC to boot; only the transmitter must be connected to the PC.
- Fully automatic KVM sharing (Local access models)
- Only two fibers needed
- Digital OSD setup menu


CrystalView Pro *fiber* Rack Advantage

The CrystalView Pro™ fiber rack is the KVM extender of choice for businesses that need to extend and operate several computers, servers, or KVM switches from a great distance. The CrystalView Pro fiber rack makes this possible by the use of standard fiber optic cable. You can fully operate and control 10 computers or servers from as far away as 33,000 feet using 9-micron fiber cable.

The CrystalView Pro fiber rack supports both DVI video as well as analog VGA video. All combinations of DVI and VGA video cards and monitors are supported. The OSD features make it easy to adjust all the necessary device parameters, color, brightness, contrast, and saturation. Using fiber cable, you can extend the distance between the transmitter and receiver further than with conventional CAT5 cable. In addition, fiber cable is unaffected by electromagnetic interference, keeping your data safe from interference from lightning and over voltage transients.


The modular architecture makes the CrystalView Pro fiber easily adapted to your system. PS/2, SUN, and USB peripherals are supported. CAT5, Multi-Mode and SingleMode fiber cabling, serial for Touchscreens and other supported serial devices, stereo audio, parallel for printers, and 10BaseT Ethernet are also supported as options.

Up to 10 transmitters or receivers can be installed. Each module is totally independent giving you the flexibility needed to interface to PCs, serial devices, Sun systems, Touchscreens and more from a central location.

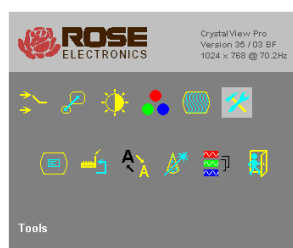

On-screen display

Typical Application

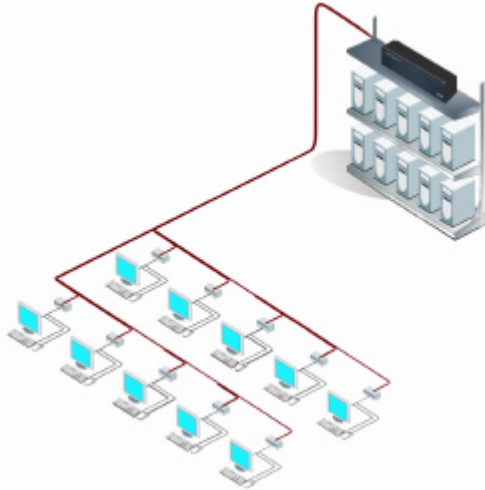

CrystalView Pro fiber basics: The CrystalView Pro fiber consists of a transmitter that connects to a PC, server, or KVM switch and a receiver that connects to a keyboard, monitor, and mouse, or a KVM switch. The transmitter and receiver units are connected together with up to 33,000 feet of standard 9-micron optical fiber cable.

The ideal way to apply the CrystalView Pro fiber is to connect the transmitter to a Rose Electronics KVM switch. Expanding the switch allows the receiver to access up to 1,000 computers or servers. The Rose KVM switch can be connected between the transmitter and computers, the KVM station and the receiver unit, or both.

Installation: Installing the CrystalView Pro fiber unit is as easy as connecting the KVM station to the receiver, connecting the CPU to the transmitter, and connecting the transmitter to the receiver with fiber cable.

Models: The CrystalView Pro fiber is available in different models with PC, SUN, and USB support. The PC model is available in a dual version allowing for a second KVM station next to the PC's, providing operation from the transmitter or the receiver unit. A rack version, containing 10 transmitters or receivers is also available.

Keyboard and mouse emulation The CrystalView Pro fiber uses a microprocessor to emulate the keyboard and mouse. This means that the keyboard and mouse on the receiver do not have to be connected for the PC to boot. Only the Transmitter must be connected to the PC.

Rack Assembly The CrystalView Pro fiber Rack is designed to easily mount in a standard 19" rack.

Part Numbers

Single rack cards

CRV-DLDMFPDVI-xRK	Local-PC-Dual-MultiMode
CRV-SRDFMPDVI-xRK	Remote-PC-MultiMode
CRV-DLDFSPDVI-xRK	Local-PC-Dual-SingleMode
CRV-SRDFSPDVI-xRK	Remote-PC-SingleMode
CRV-SLDFMUDVI-xRK	Local-USB-MultiMode
CRV-SRDFMUDVI-xRK	Remote-USB-MultiMode
CRV-SLDFSUDVI-xRK	Local-USB-SingleMode
CRV-SRDFSUDVI-xRK	Remote-USB-SingleMode

x = I - Internal PSU / E - External PSU

Rack units populated with 10 cards

CRV-DLDFMPDVI-RK10L	Local-PC-Dual-MultiMode
CRV-SRDFMPDVI-RK10R	Remote-PC-Dual-MultiMode
CRV-DLDFSPDVI-RK10L	Local-PC-Dual-SingleMode
CRV-SRDFSPDVI-RK10R	Remote-PC-Dual-SingleMode
CRV-SLDFMUDVI-RK10L	Local-USB-MultiMode
CRV-SRDFMUDVI-RK10R	Remote-USB-MultiMode
CRV-SLDFSUDVI-RK10L	Local-USB-SingleMode
CRV-SRDFSUDVI-RK10R	Remote-USB-SingleMode
ACC-DVIMVF	VGA to DVI converter

Specifications

Dimensions	11.7 W x 7.0 D x 7.0 H
Weight	Approximately 46 lbs
Operating Temp	10° C-45° C / 50° F-113° F
Humidity	80% max, non-condensing
Resolution	Up to 1600 x 1200 @ 60Hz
Connectors	Video – DVI PC -Keyboard/Mouse – MiniDin6 USB – Keyboard/Mouse – Type A/B Power – 4-Pin square Program – RJ22 Serial – DB9M Audio – 3.5mm stereo jack (2)
Wavelength	(MultiMode) – 850nm (SingleMode) – 1300nm
Power	(MultiMode) – 70-400µw (SingleMode) – 180-2000µw



Dual transmitter - 10 module rack